



C19: ACPS-A/C Pressure Switch

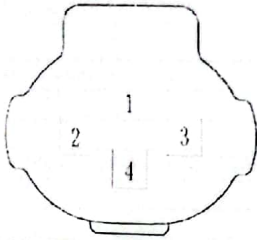

Hole Position	Function Description	Note
1	Grounding	
2	Grounding	
3	Medium Pressure Signal (To ECU)	
4	To A/C Controller	

C18: ABS/ESP-To ABS/ESP Control Module

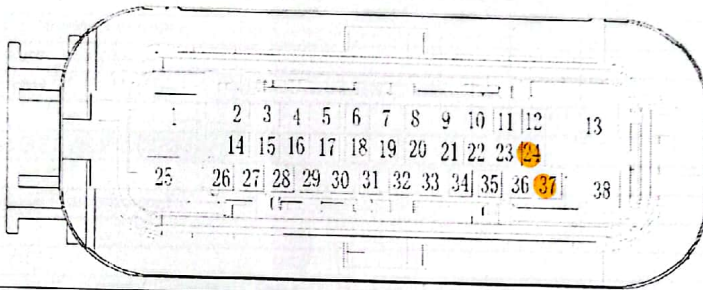

Hole Position	Function Description	Note
1	Grounding 1-Motor	
2	ESP Switch	*ESP
3	N/A	
4	To Electronic Steering Lock	*Electronic Steering Lock
5	N/A	
6	Left Front Wheel Speed Sensor Signal	
7	N/A	
8	N/A	
9	N/A	
10	Right Front Wheel Speed Sensor Signal	
11	N/A	
12	N/A	
13	Constant Power Supply 1-Motor	
14	N/A	
15	N/A	
16	Tire Pressure Signal	*DCT&TPMS&ABS
17	N/A	
18	N/A	
19	Left Front Wheel Speed Sensor Power Supply	
20	Left Rear Wheel Speed Sensor Signal	
21	Right Rear Wheel Speed Sensor Power Supply	