



## Connector Definition

X01: Instrument Cluster to Engine Compartment (Left)

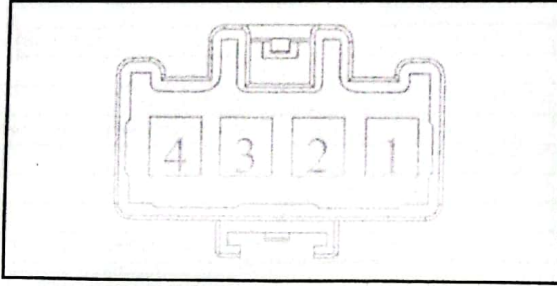


Engine Compartment to Instrument Cluster (Left)

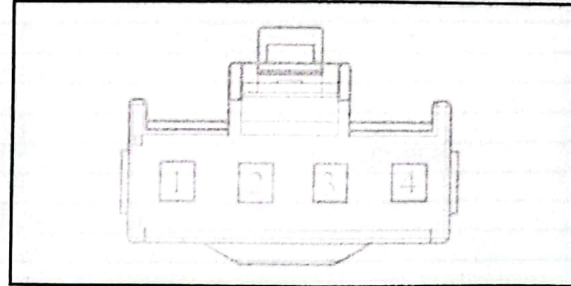


Hole Position	Function Description	Note
1	AM2 (Ignition Lock IG2 and ST Input)/IG2 Power (PEPS)	Ignition Lock Model is AM2, PEPS Model is IG2
2	AM1 (Ignition Lock IG1 and ACC Input)/ACC Power (PEPS)	Ignition Lock Model is AM1, PEPS Model is ACC
3	Cabin Fuse and Relay Box Constant Power Supply 2	
4	Cabin Fuse and Relay Box Constant Power Supply 1	

X02: Instrument Cluster to Engine Compartment (Left 2)

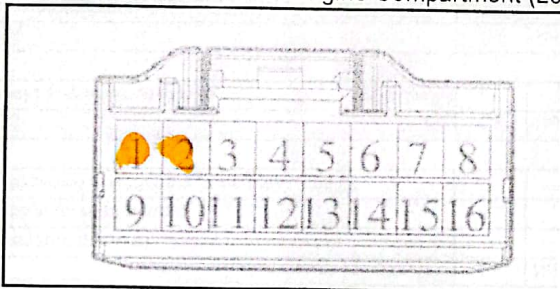

Engine Compartment to Instrument Cluster (Left 2)

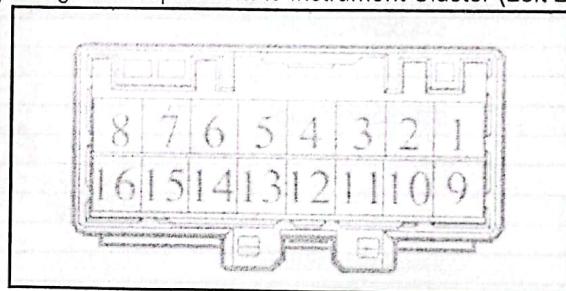

Hole Position	Function Description	Note
1	CAN-H	
2	CAN-L	
4	Backup Lamp Relay Coil Drive	*DCT
5	Brake Fluid Level Switch Signal	
7	Horn Relay Coil Drive	
8	Grounding	
9	Redundant Clutch Switch Signal (PEPS)	*PEPS
10	Light Adjustment Signal	
11	Oil Pressure Signal	
12	Outside Temperature Sensor +	
13	Light Adjustment Switch Power Supply (Low Beam)	
16	Outside Temperature Sensor -	