


Instrument Panel Wiring Harness Connector (P--)

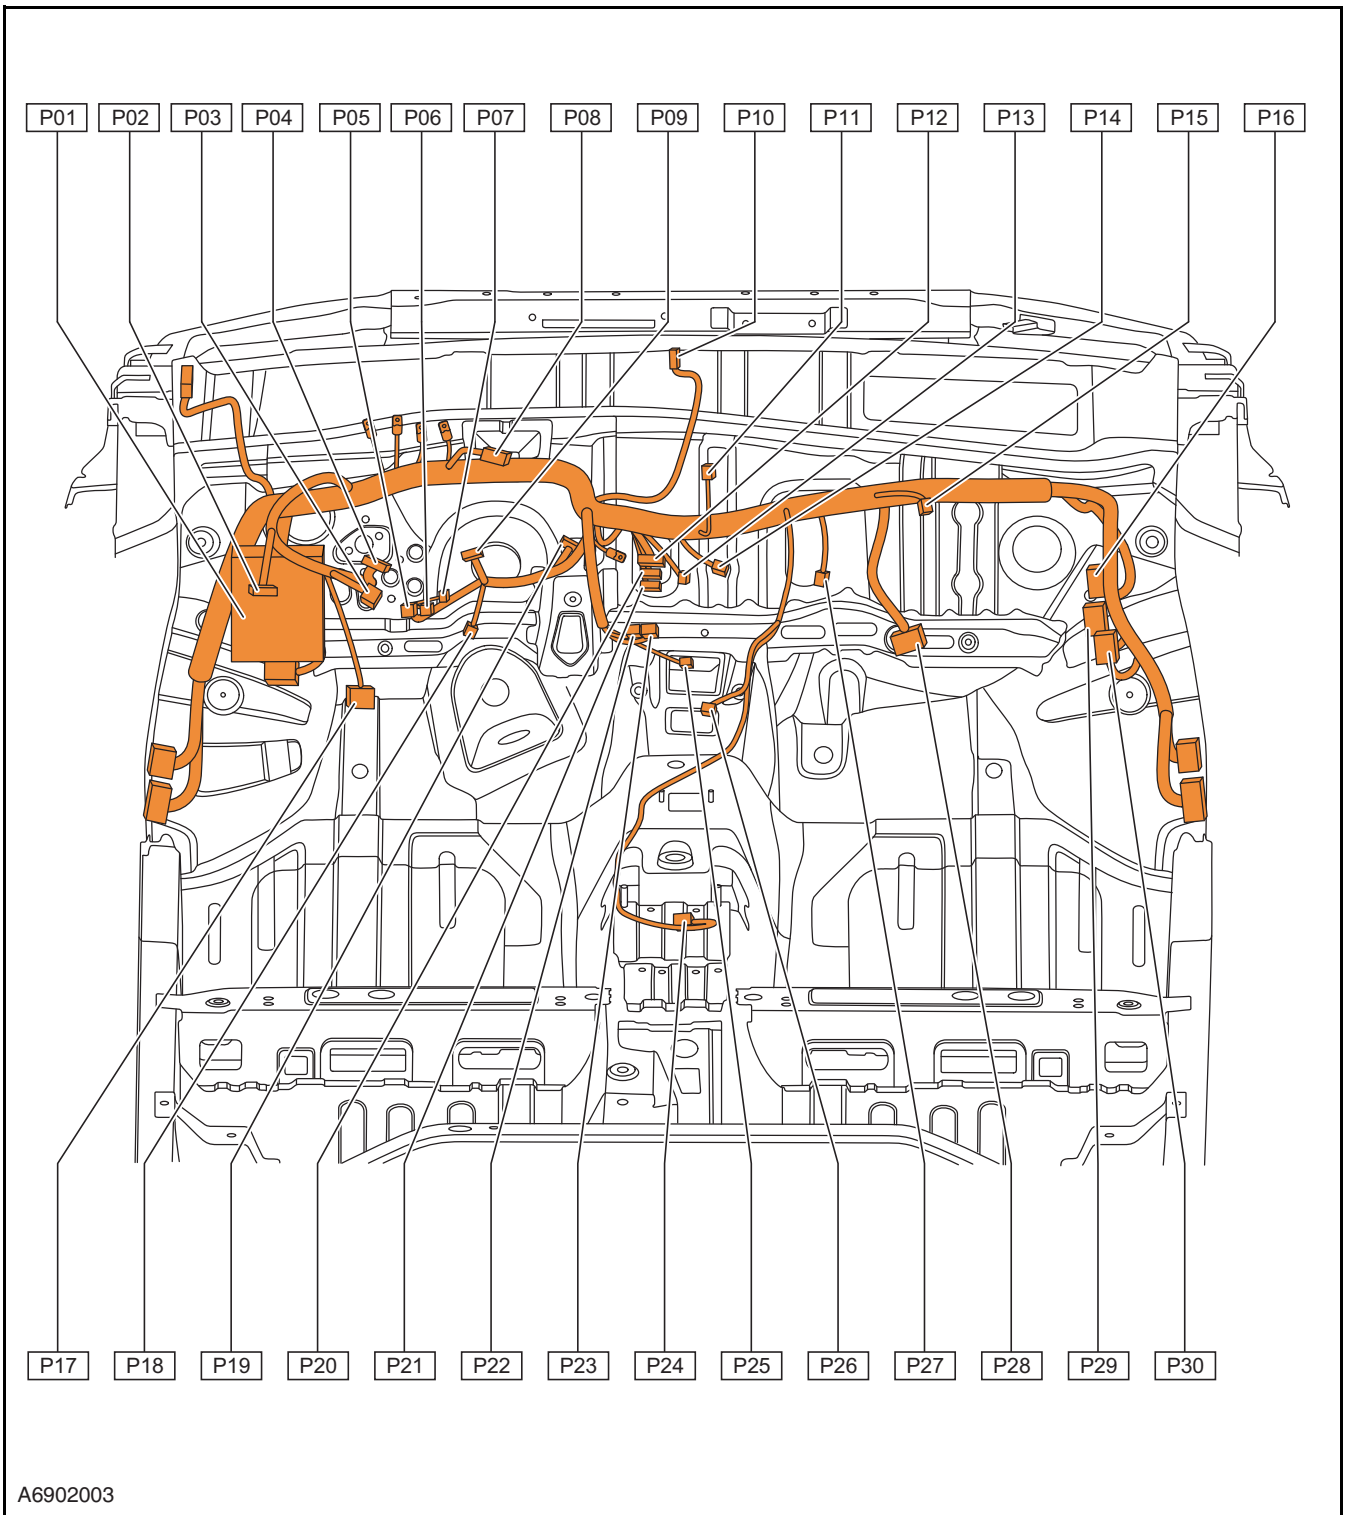

Instrument Panel Wiring Harness Connector (P) Definition List

Connector Name	Definition	Note
Instrument Panel Fuse Box	P01	-
Instrument Panel Switch Box	P02	-
Ignition Switch	P03	-
Combination Switch - Lamp	P04	-
Rotary Connector (Control Button)	P05	-
Rotary Connector - Driver Airbag	P06	-
Rotation Angle Sensor	P07	-
Instrument Cluster Display	P08	-
Combination Switch - Wiper	P09	-
Ambient Light Sensor	P10	-
Front Display	P11	-
VD-C	P12	-
VD-F	P13	-
Antenna Power Supply	P14	-
Front Passenger Airbag	P15	-
BCM-2	P16	-
Diagnostic Interface	P17	-
Key Reminder Switch	P18	-
Instrument Cluster LCAN Short Circuiter	P19	-
VD-B	P20	-
VD-A	P21	-
Manual A/C Controller B	P22	-
Manual A/C Controller A	P23	-
Shifter	P24	DCT
Emergency Alarm Switch	P25	-
Power Outlet	P26	-
Reversing Radar Controller	P27	-
Heating, Ventilating and Air Conditioning Assembly	P28	-
BCM-4	P29	-
BCM-3	P30	-