




On-board Network System

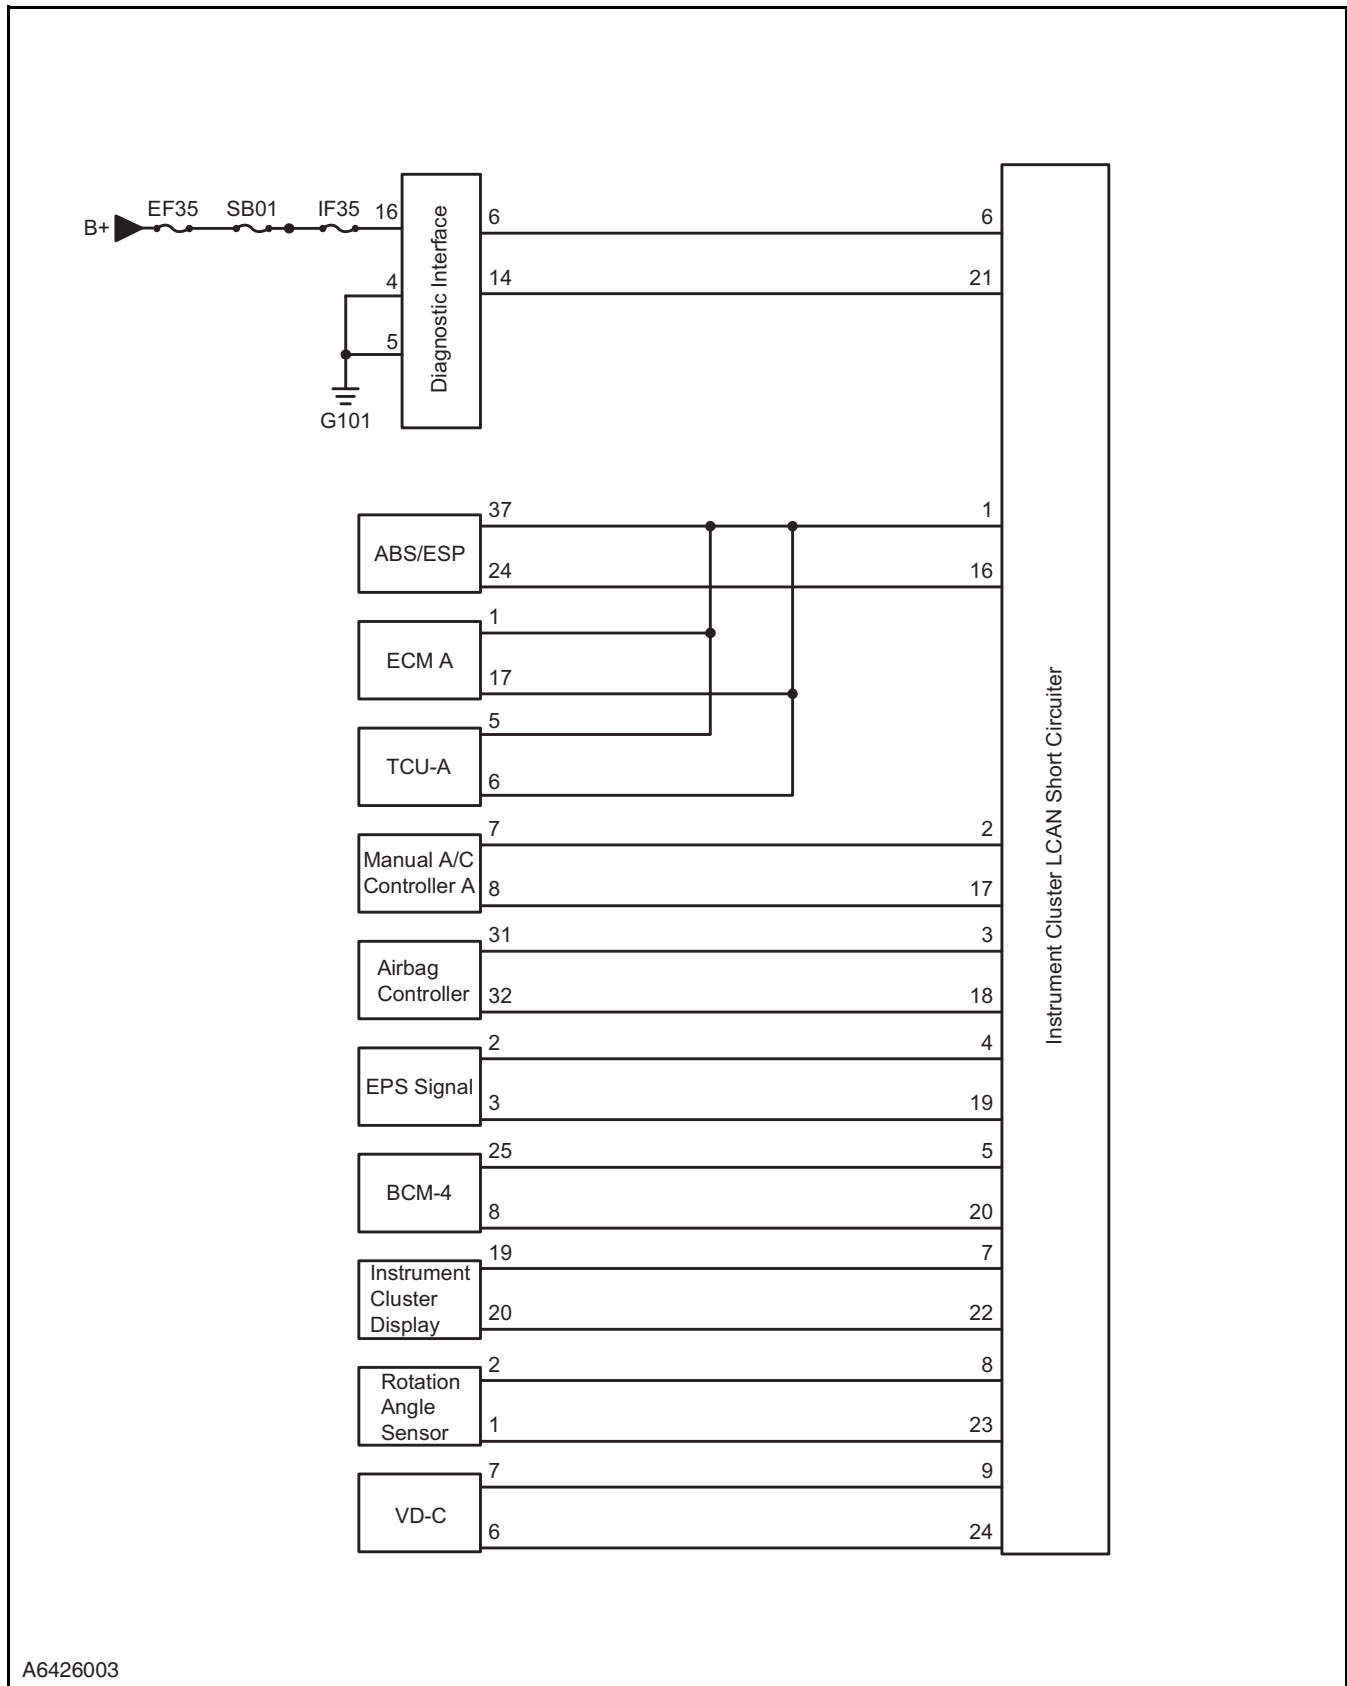

On-board Network System - 1

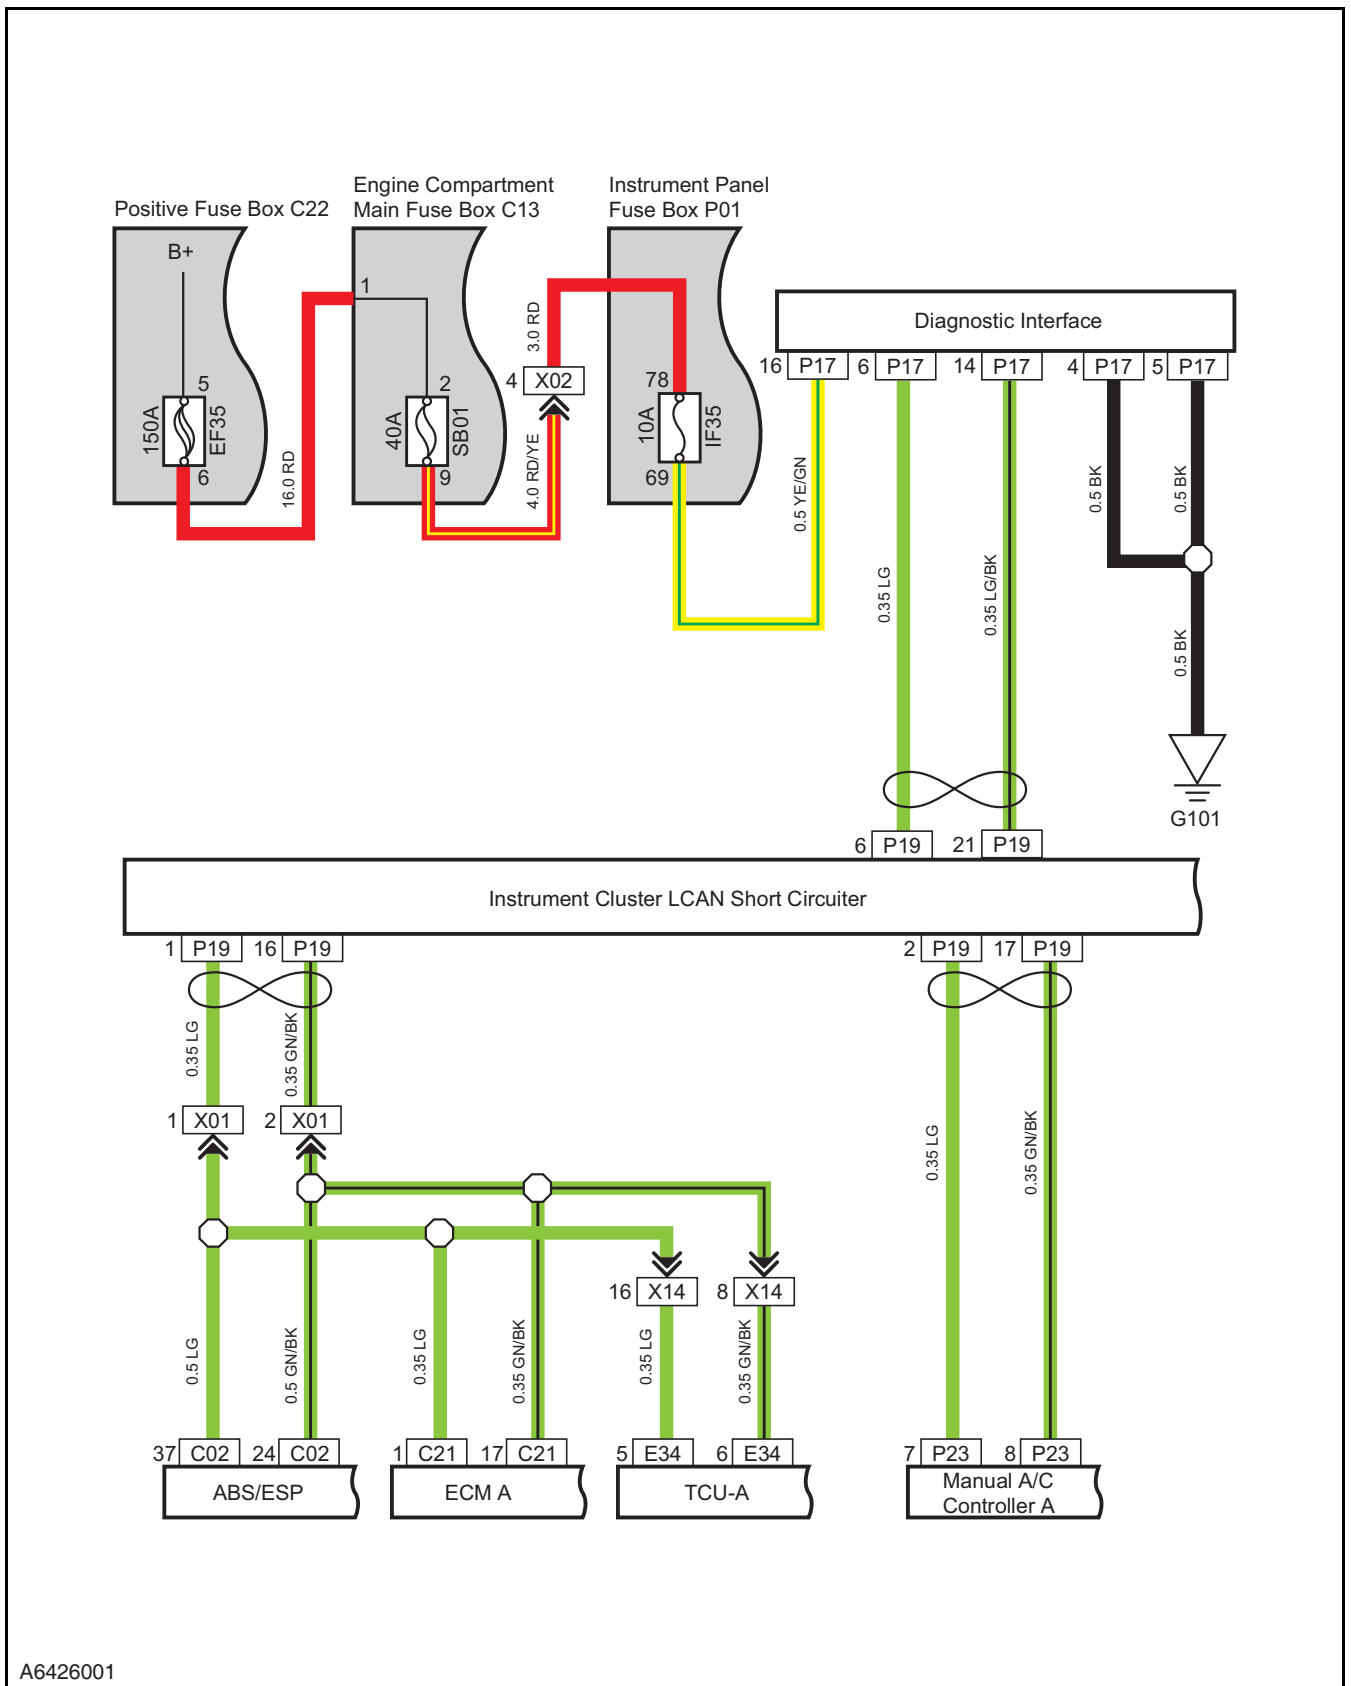


On-board Network System - 2

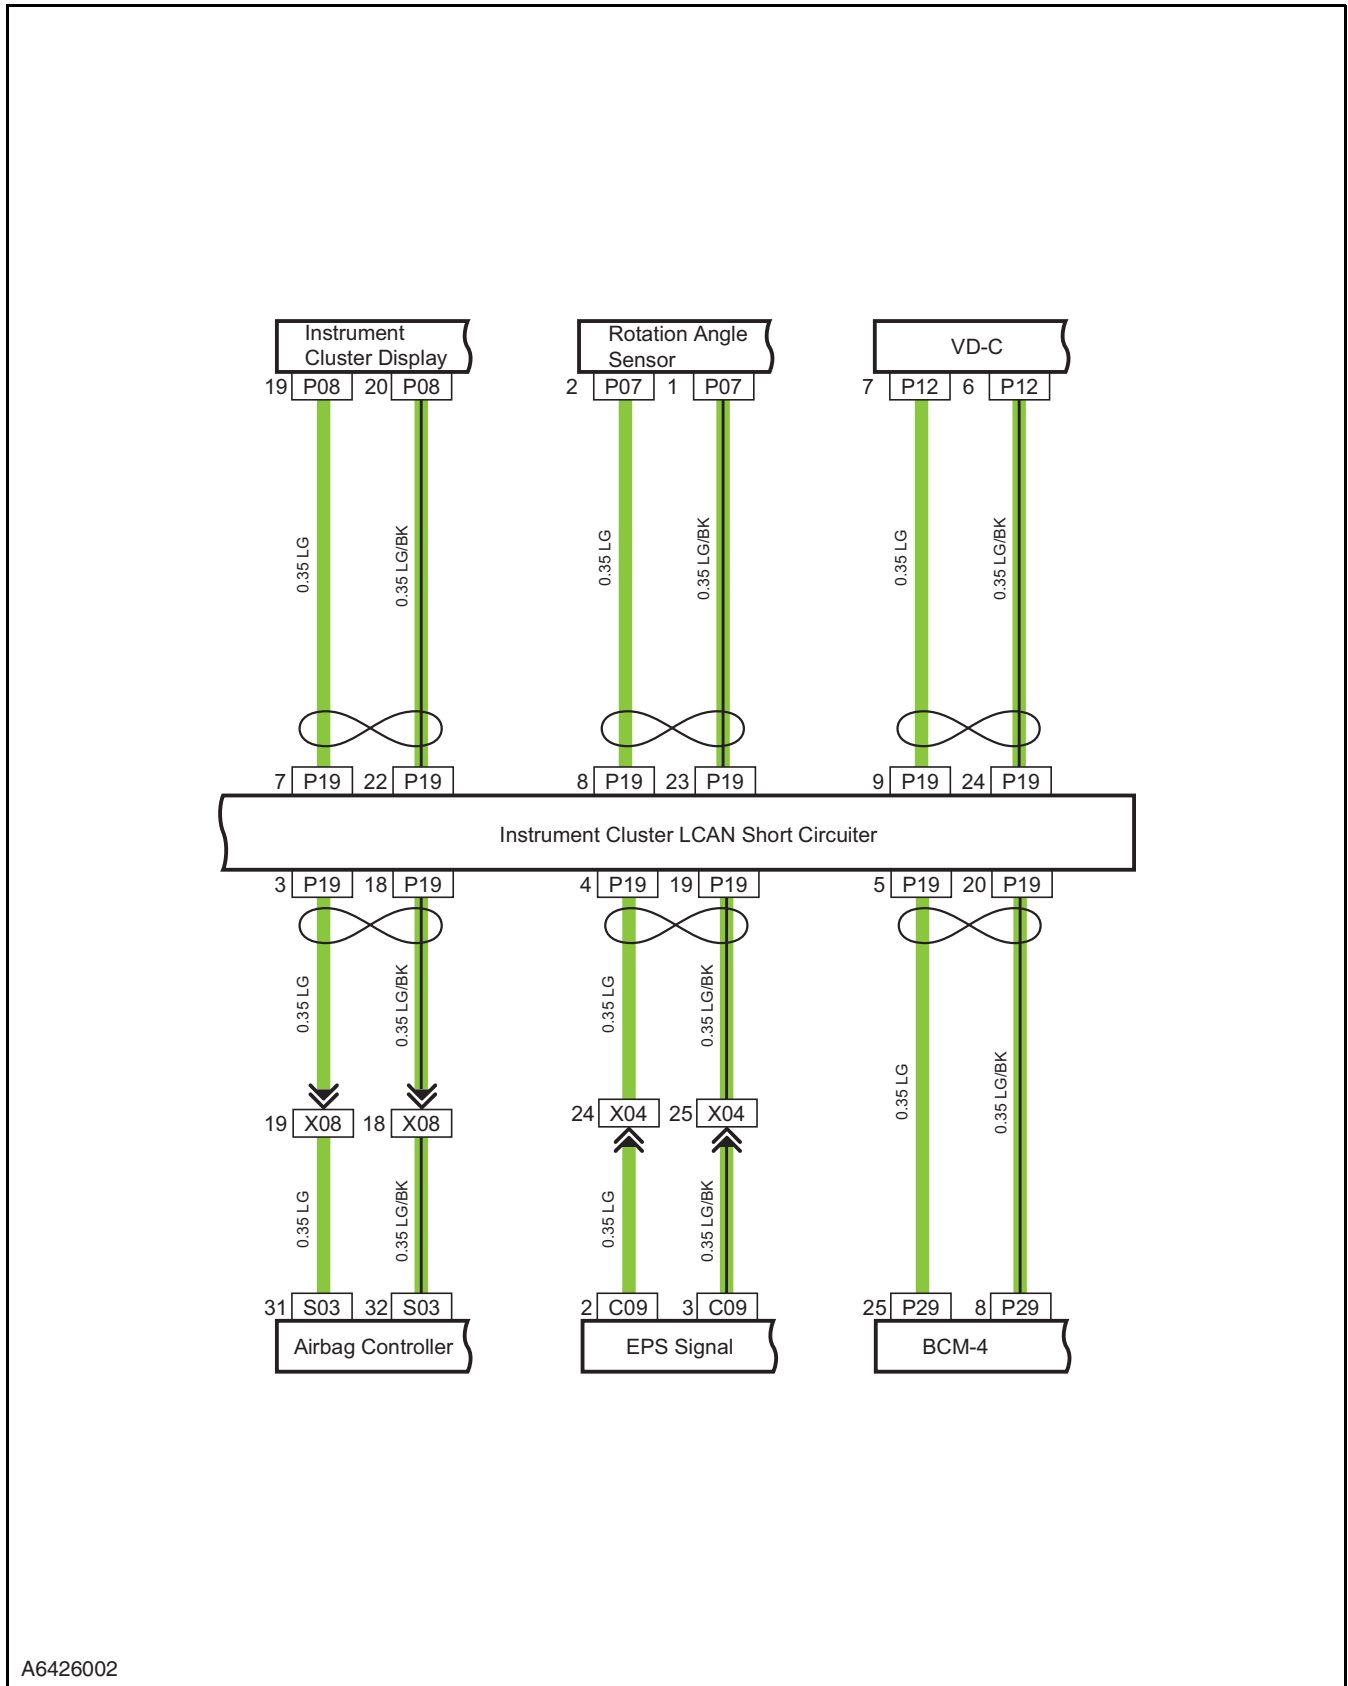


A6426002

Engine Compartment Main Fuse Box

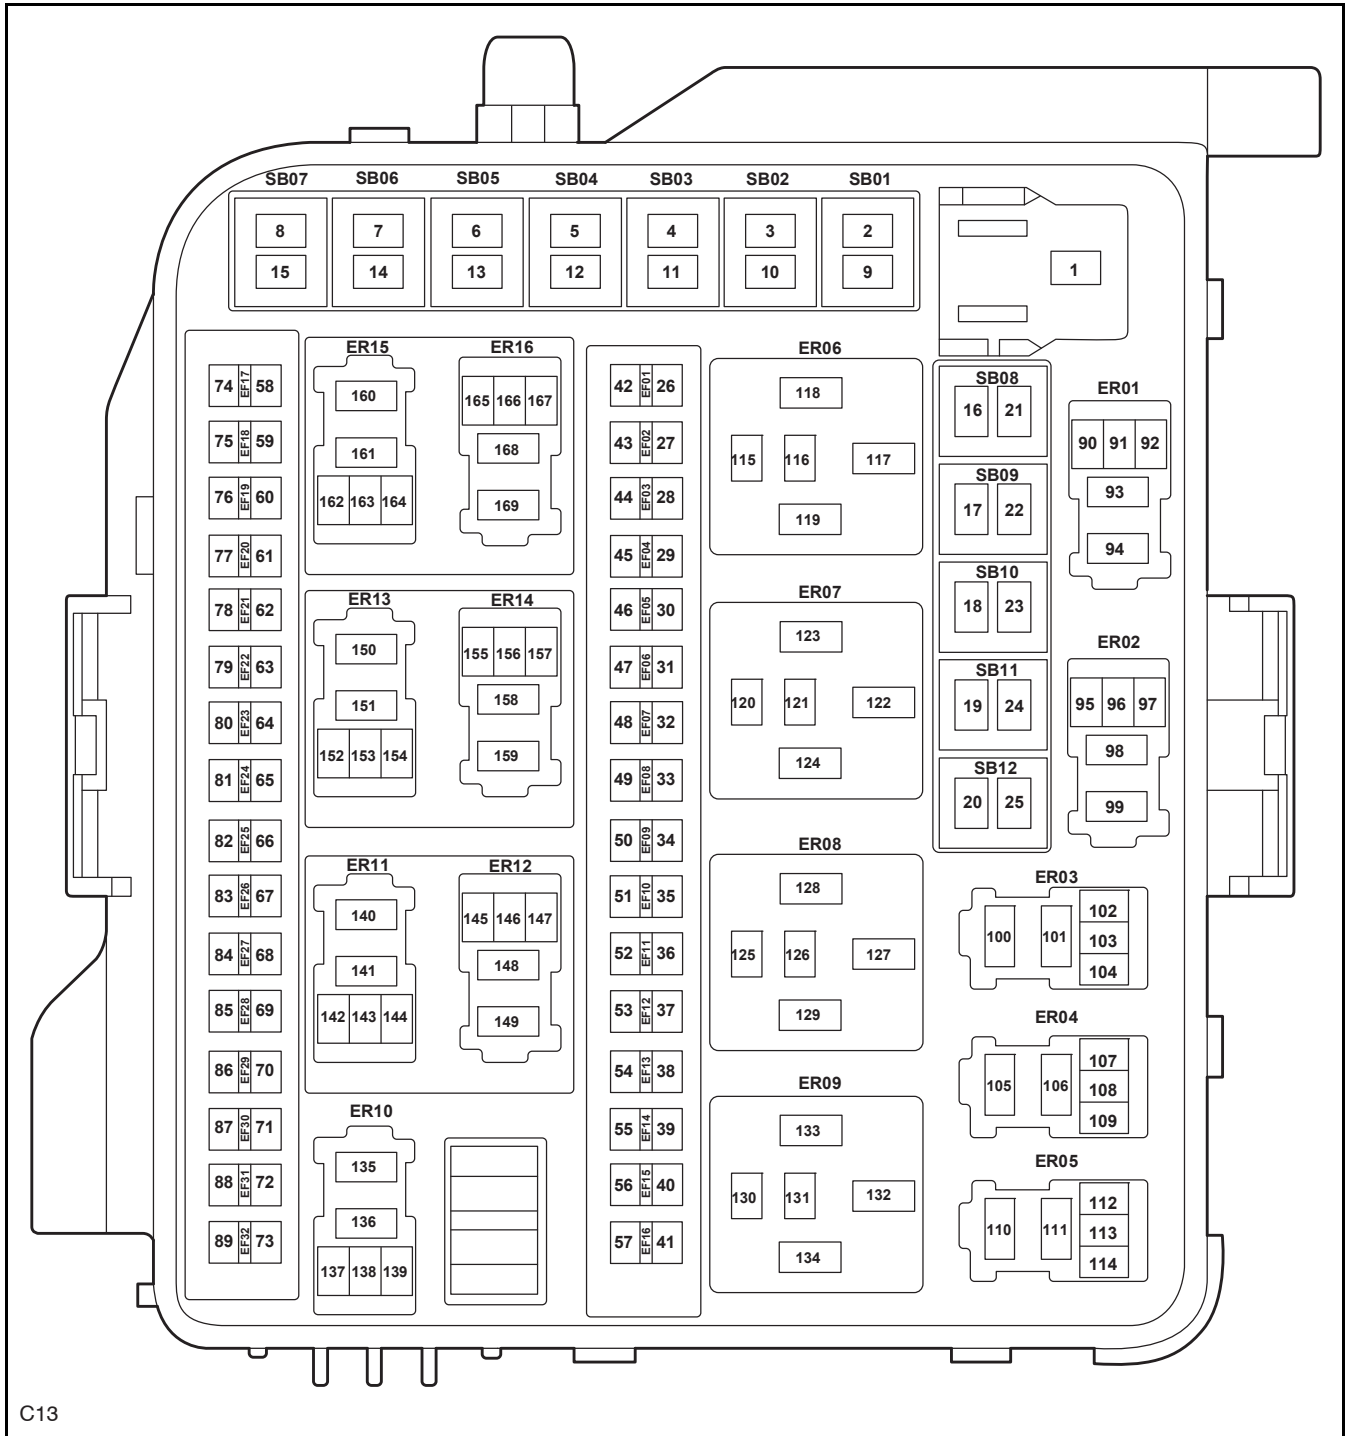

C13


Instrument Panel Fuse Box

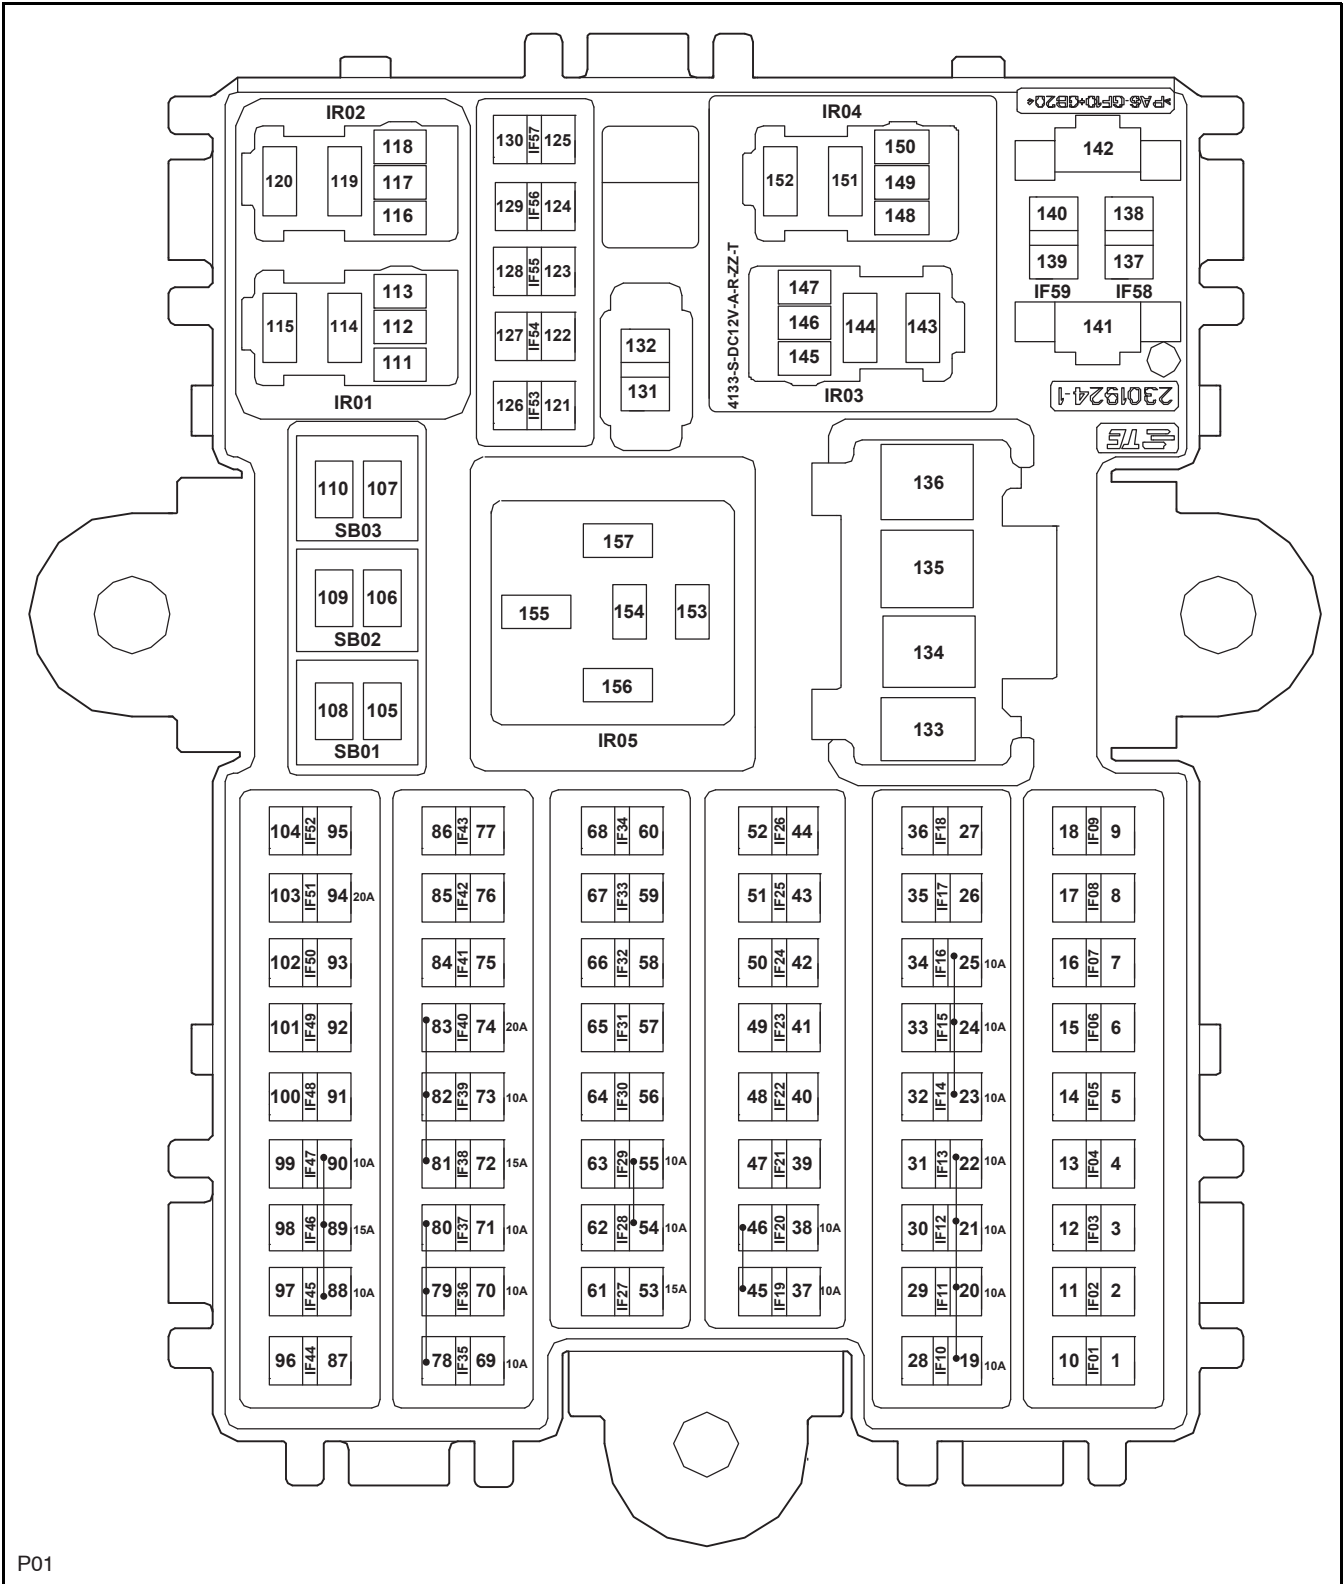

P01


Engine Compartment Wiring Harness to Instrument Panel Wiring Harness - Right

Instrument Panel Wiring Harness to Engine Compartment Wiring Harness - Right

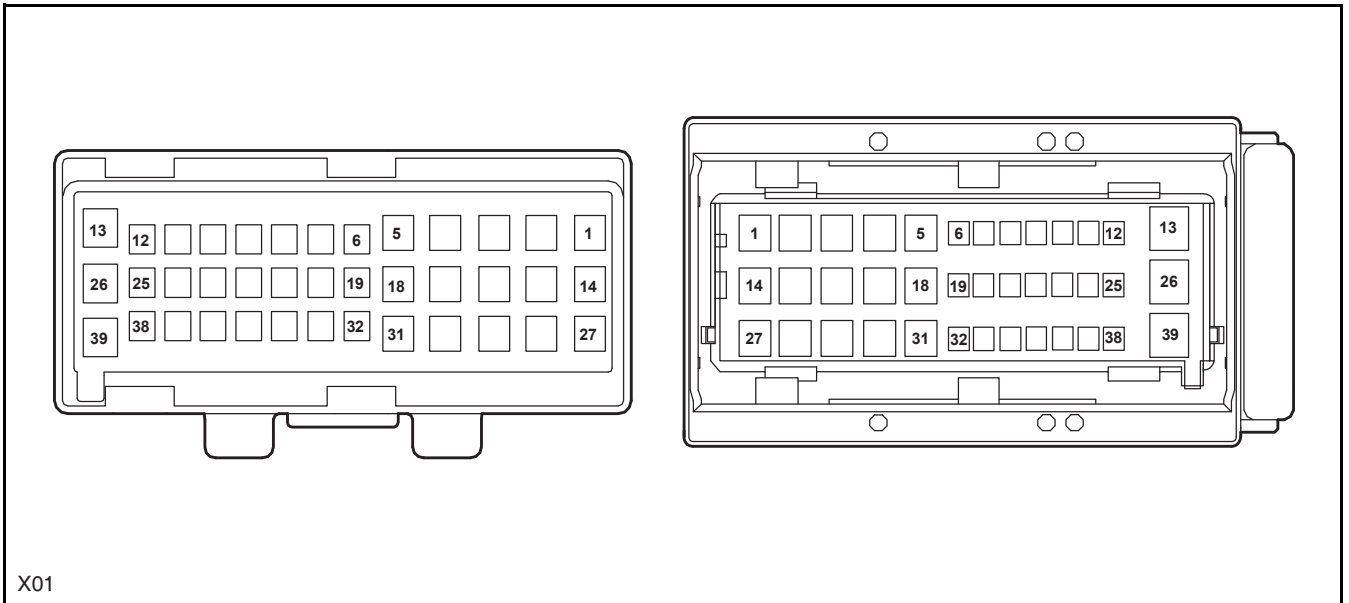


Engine Compartment Wiring Harness to Instrument Panel Wiring Harness - Instrument Panel Fuse Box

Instrument Panel Wiring Harness - Instrument Panel Fuse Box to Engine Compartment Wiring Harness

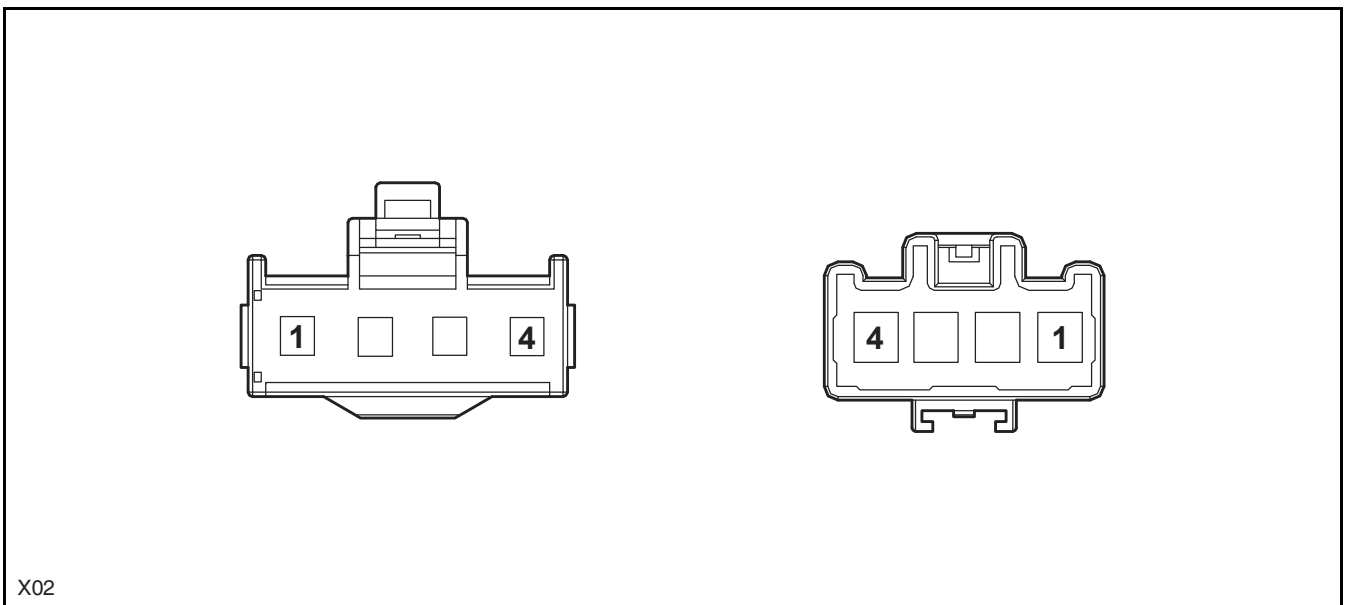


Engine Compartment Wiring Harness to Instrument Panel Wiring Harness - Left

Instrument Panel Wiring Harness to Engine Compartment Wiring Harness - Left

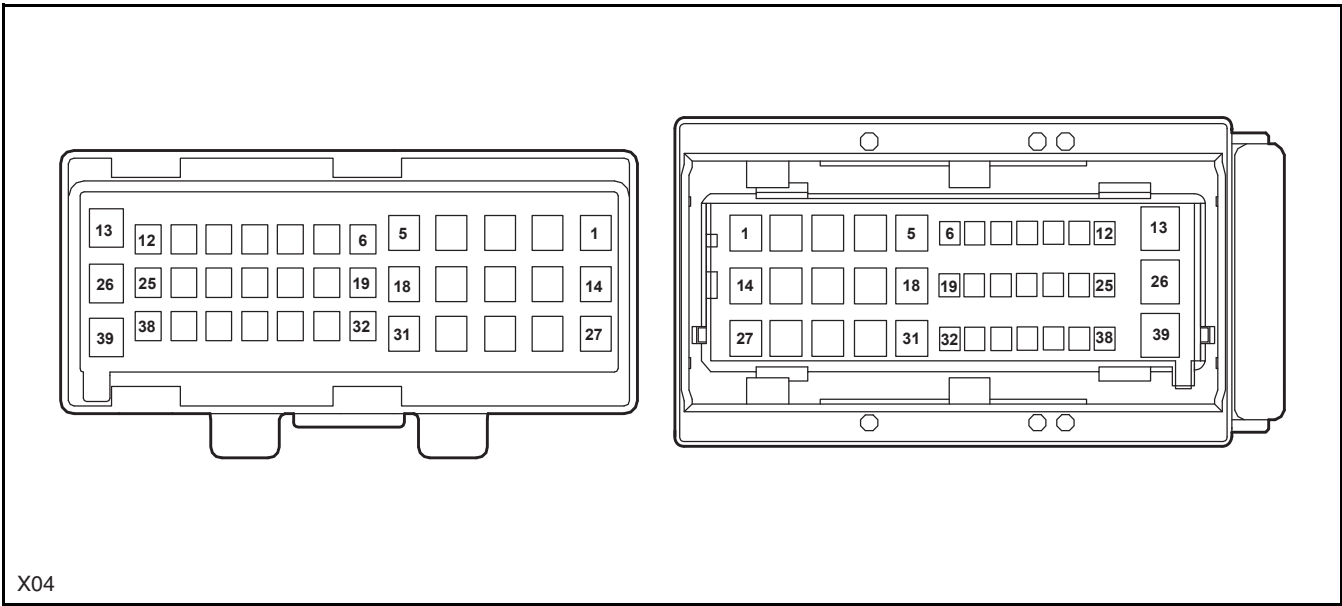


Instrument Panel Wiring Harness to Chassis Wiring Harness - Right

Chassis Wiring Harness to Instrument Panel Wiring Harness - Right

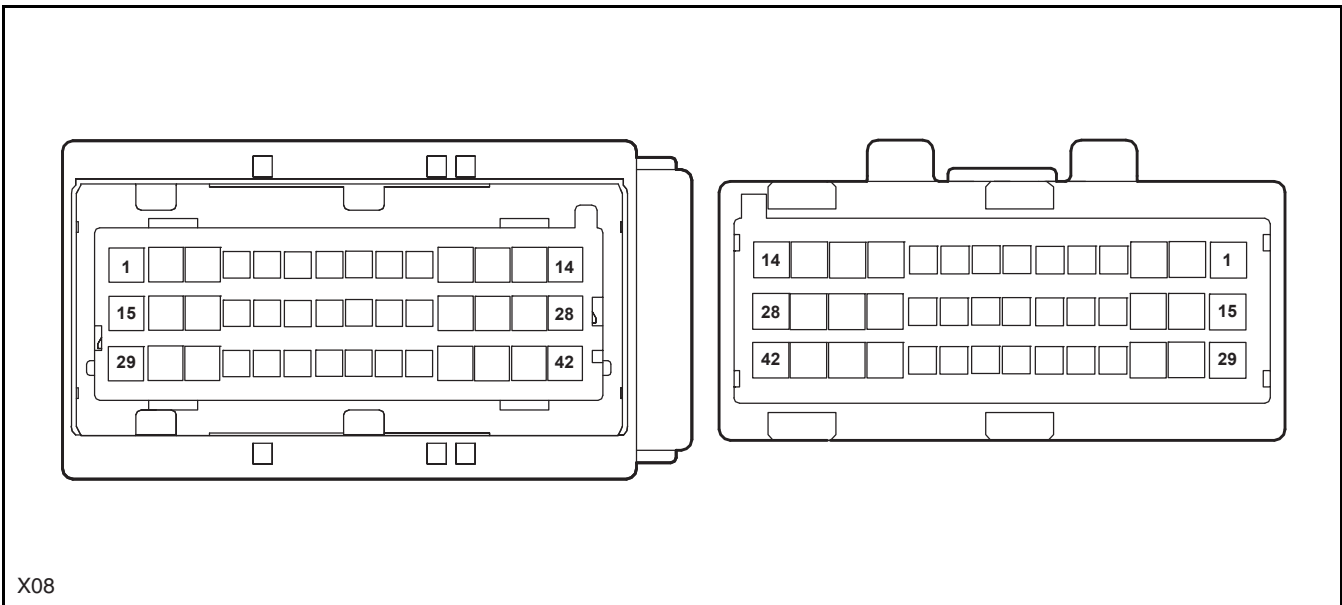

Engine Compartment Wiring Harness to TCU Wiring Harness


TCU Wiring Harness to Engine Compartment Wiring Harness

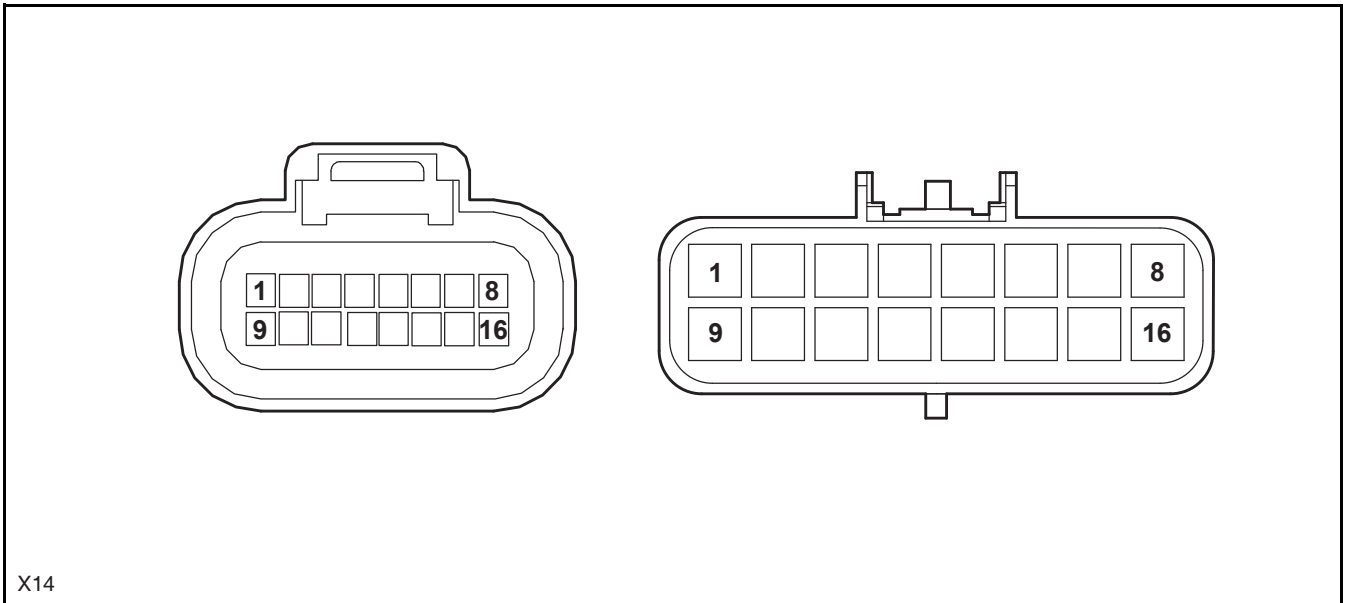

X14


Positive Fuse Box

ABS/ESP

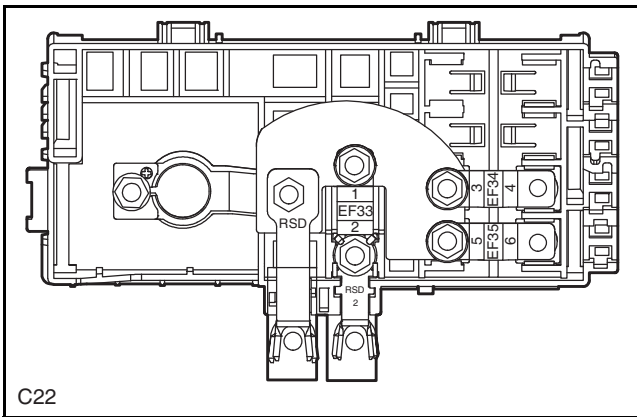


C22

EPS Signal

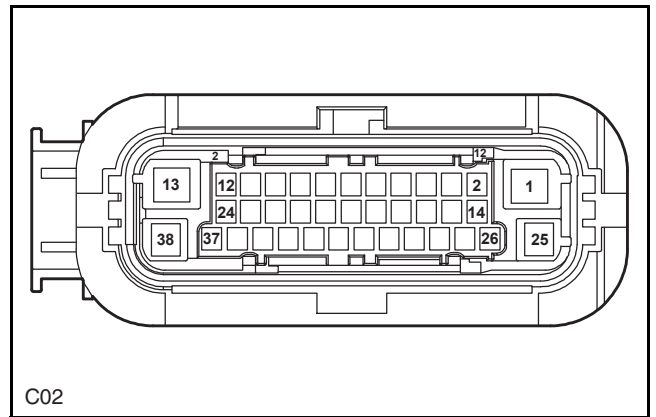


C02

ECM A

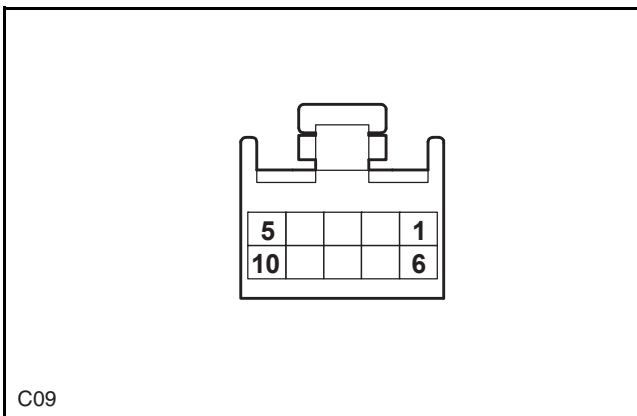


C09

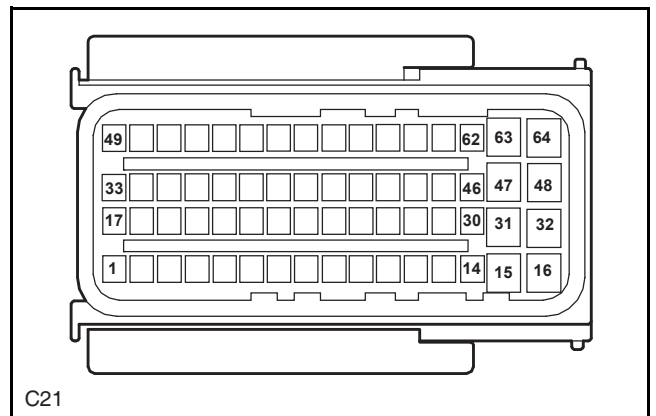


C21




TCU A

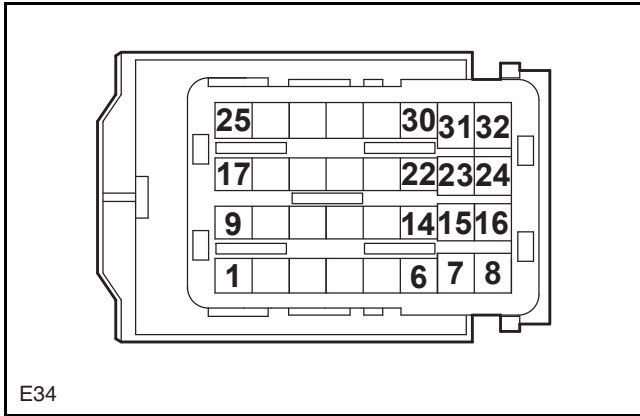


Rotation Angle Sensor

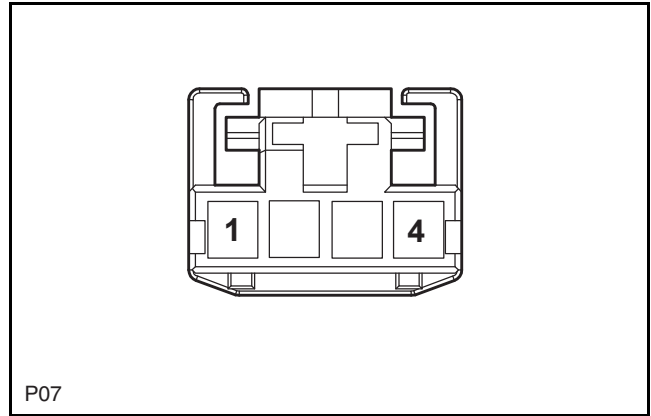


Instrument Cluster Display

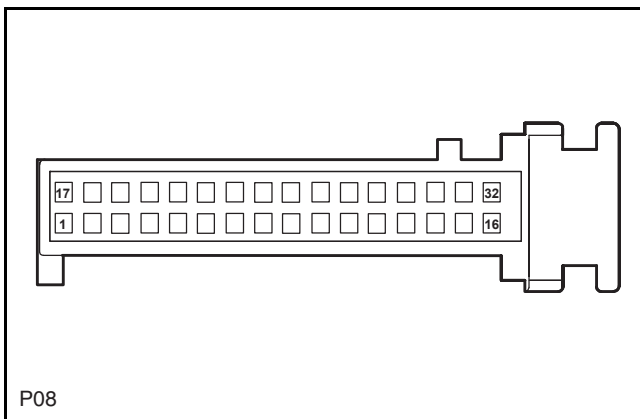


VD-C

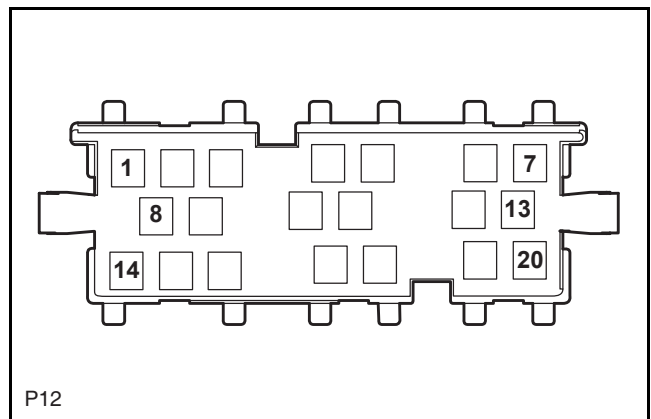


Diagnostic Interface

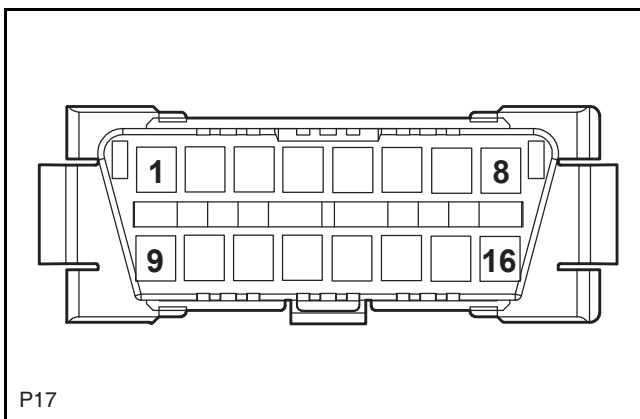


Instrument Cluster LCAN Short Circuiter

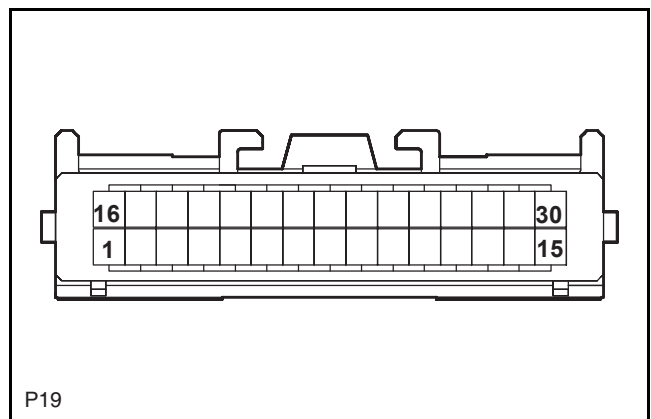

Manual A/C Controller A

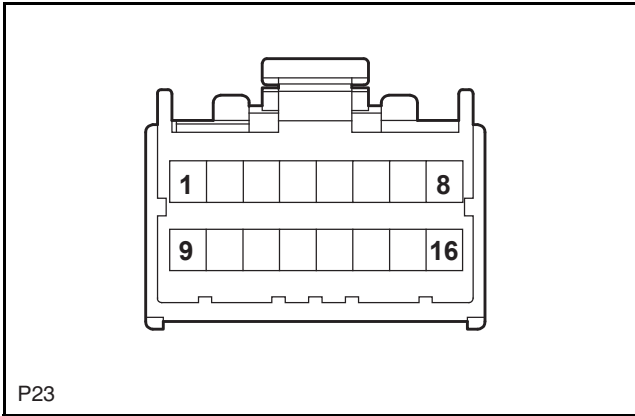

BCM-4

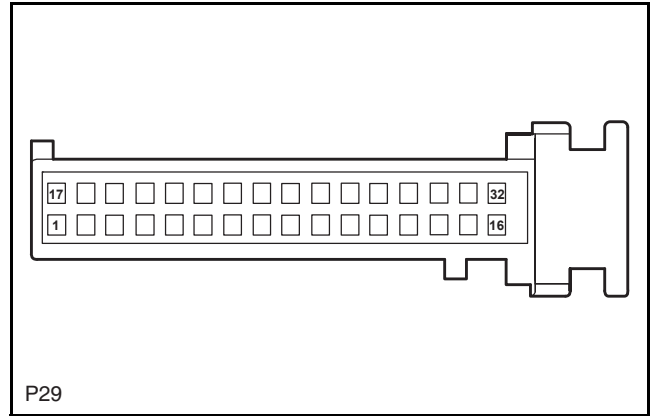

Airbag Controller

