

DTC	Description		On or Off
P2725	Clutch 2 Solenoid - HS Driver	Open Load	On
P2726		Short to Ubatt	On
P2727		Short to GND	On
P2728		General Failure	On
U2091	Error Engine CAN Signals	Message Missing Or Rolling Counter Error	Off

Failure Protection List

DCT	Description	Failure-Protection Operation	Prerequisite of Releasing Failure Protection
P0561	Ignition Signal (Correlation Error)	Malfunction indicator on	Immediate recovery
P0563	Ignition Signal (Signal Too High)	Malfunction indicator on	Immediate recovery
P0703	Err State Data Missing	No crawling function	Ignition switch switches from OFF to ON
P0707	PRND Error (Signal Too Low)	Malfunction indicator on, PRND substitution strategy, no gear display on instrument cluster	Immediate recovery
P0708	PRND Error (Signal Too High)	Malfunction indicator on, PRND substitution strategy, no gear display on instrument cluster	Immediate recovery
P0709	PRND Error (Correlation Error)	Malfunction indicator on	Ignition switch switches from OFF to ON
P0712	Oil Temperature Sensor (Signal Too Low)	Malfunction indicator on	Ignition switch switches from OFF to ON
P0713	Oil Temperature Sensor (Signal Too High)	Malfunction indicator on	Ignition switch switches from OFF to ON
P0842	Line Pressure Sensor (Signal Too Low)	Malfunction indicator on, lock gear	Ignition switch switches from OFF to ON
P0843	Line Pressure Sensor (Signal Too High)	Malfunction indicator on, lock gear	Ignition switch switches from OFF to ON
P0844	Line Pressure Sensor Correlation Error (Sensor shows 0, but other pressure show signal)	Malfunction indicator on, lock gear	Ignition switch switches from OFF to ON
P0847	Clutch 1 Pressure Sensor (Signal Too Low)	Malfunction indicator on, no crawling No self-adaptive shift control Cancel DCT shift mode	Immediate recovery