



16. Remove the transmission negative wiring harness ground point retaining bolt.


Torque: 8 ± 1 Nm

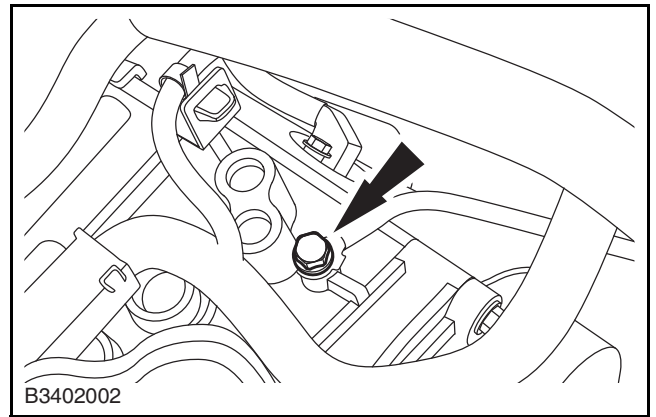

17. Disconnect connector between transmission wiring harness and engine compartment wiring harness.

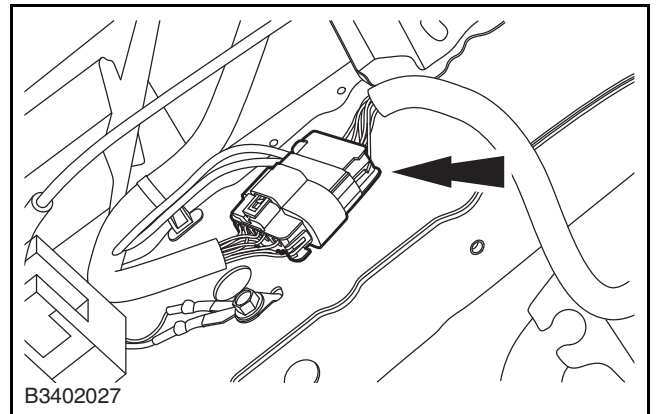

18. Disconnect the TCU control unit wiring harness connectors.

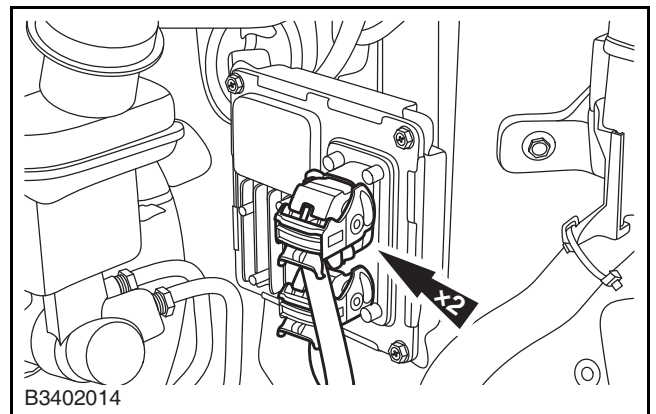

19. Loosen the heating inlet and outlet pipe clamps and disconnect the heating inlet and outlet pipes.

